




**7466.0030**

Onderdelen informatie  
Erzatzteil information  
Spare part information  
Information de pièces





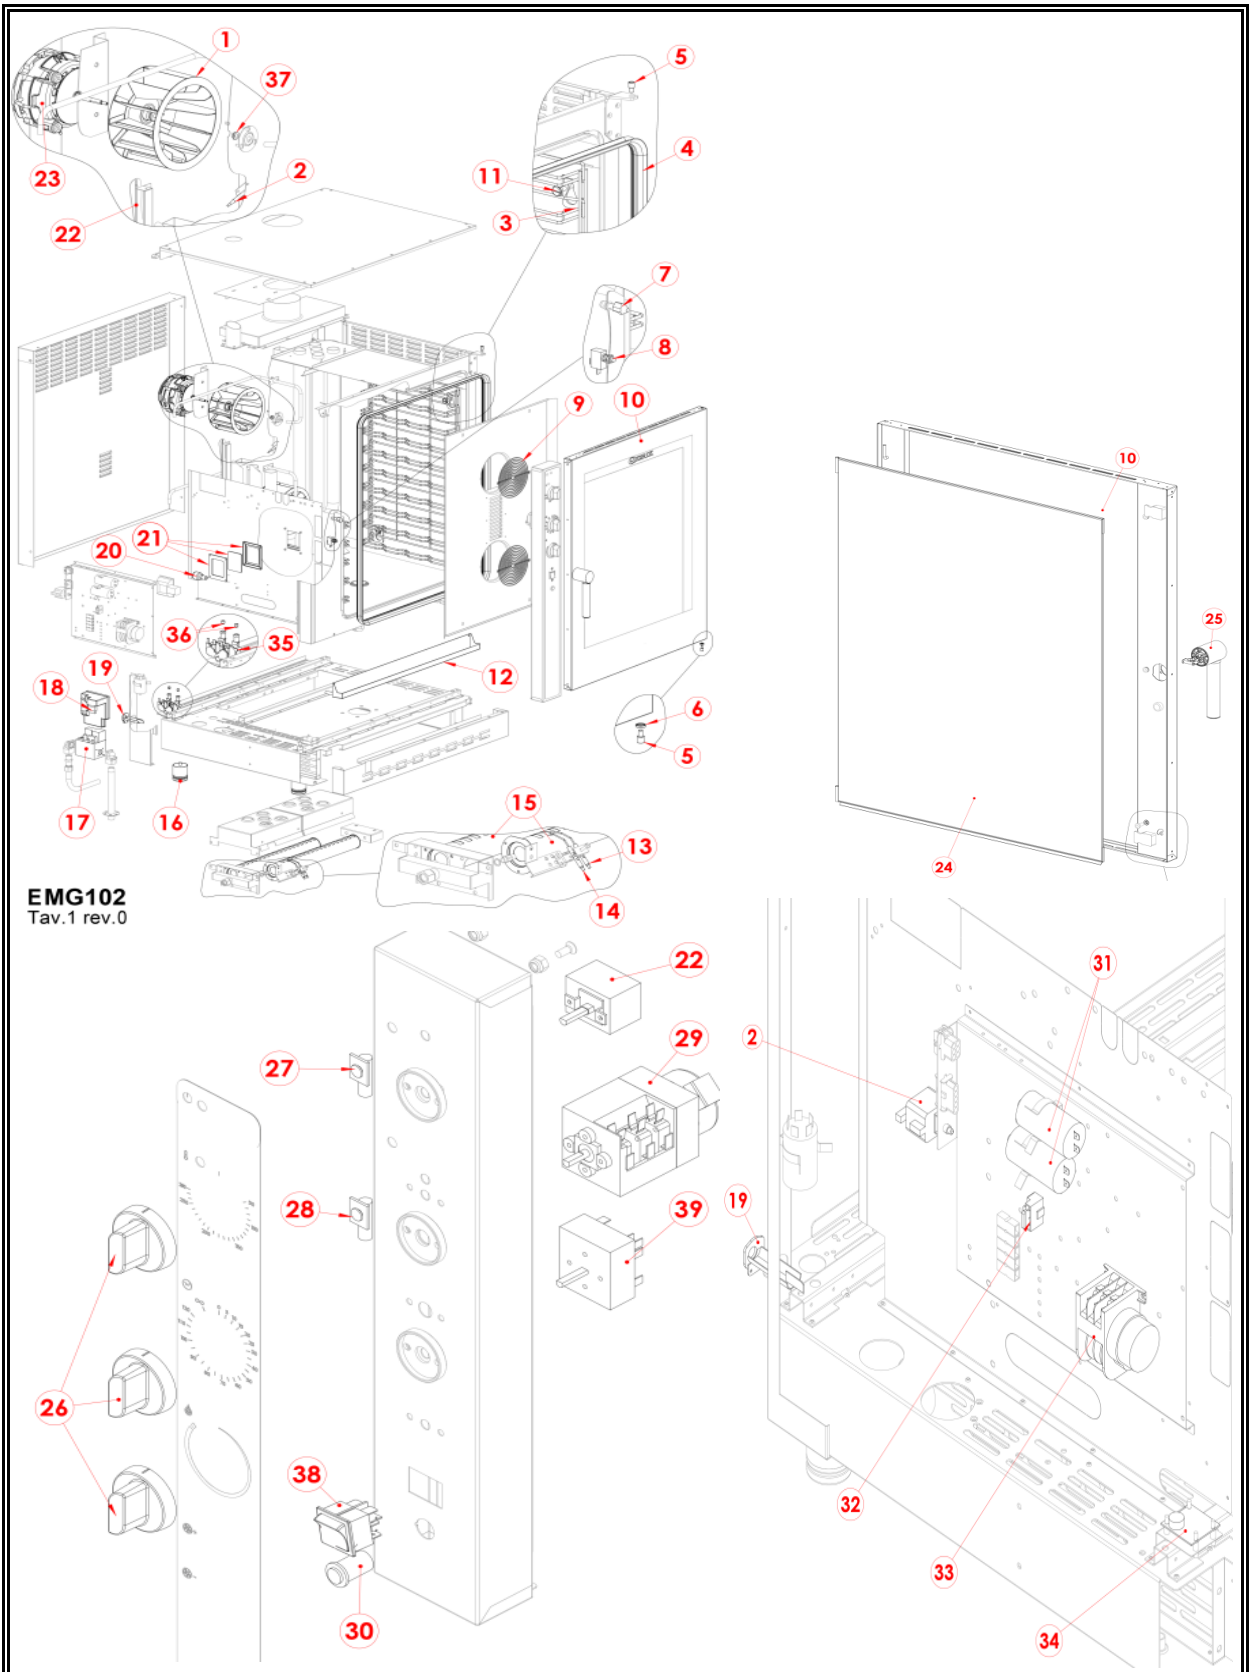

POS:	Art.No.:	Omschrijving:	Aantal:
1	CS9089.0410	Oven fan with polygonal blades 180x100	
2	CS9089.0075	Thermostat 1ph. safety.350°C 5519562030	
3	CS9089.0655	Grids rack	
4	CS9089.0200	Seal black	
5	CS9089.0305	Spindle for door	
6	CS9089.0306	Bush for door pin	
7		Whiting for closing	
8	CS9089.0160	Door microswitch	
9		Fan guard grid	
10		Door with glass	
11		Bearing pin for grids rack	
12		Condensation collector tray	
13	CS9102.0166	Flame control electrode	
14	CS9102.0169	Ignition spark-plug	
15	CS9102.0206	Burner	
16	CS9102.0213	Adjustable foot	
17	CS9102.0203	Valve body SIGMA(ECO) 0840014	
18	CS9089.0390	Flame control DBC	
19		Terminal block	
20	CS9393.0330	Oven light	
21	CS9089.0170	Kit lamp socket gasket	
22	CS9089.0288	Main thermostat	
23	CS9089.0255	Motor 1ph hp0,25	
24		Oven glass	
25	CS9102.0470	Oven door knob	
26		Silk-screened knob for oven	
27	CS9999.0062	Fluorescent pilot light (green)	
28	CS9999.0061	Neon pilot light (orange)	
29	CS9089.0125	Timer 120'	
30		Luminous reset push button	
31		Motor capacitor 12,5uF	
32		Fuseholder	
33	CS9089.0380	Motor rotation inverter	
34	CS9089.0565	Electronic buzzer board	
35	CS9089.0240	2-way solenoid valve with filter	
36	CS9089.0210	Nozzle for pipe humidifying	
37	CS9102.0125	Motor shaft seal	
38		2 speed switch	
39	CS9162.5310	Energy regulator 16A 220V	