



USE AND MAINTENANCE MANUAL

MPE423 - MPE523.. MPE4 - MPE5.. - MPE7.. - MPE10.. MDE523.. - MDE5.. - MDE7.. - MDE10.. MPG5 - MPG7 - MPG10 MDG5 - MDG7 - MDG10



Rev. 2013-05.16

1.1	General and safety warnings	3
1.2	Connection to gas supply	4
1.3	Checking gas pressure	6
1.4	Replacing nozzles (gas type change)	6
1.5	Electric connection	7
1.6	Fume discharge	8
1.7	Connection to the drain	8
1.8	Connection to the detergent pipe	9
1.9	Switching on oven and testing	9

2. Use instruction

2.1	Preliminary information	10
2.2	Control Panel	11
2.3	Convection cooking	12
2.4	Steaming	13
2.5	Convection/steam combi cooking	14
2.6	Core probe cooking	15
2.7	Cooking with 🖍	16
2.8	Humidity draining valve	17
2.9	Cooking chamber cool down	17
2.10	Pre-heating	18
2.11	Programming cooking processes	19
2.12	Cooking programs storage	19
2.13	Loading a stored cooking program	20

2.14	Modification and/or cancelling of the cooking programs	20
2.15	Compartment lighting	21
2.16	Stop and oven swich off	21
2.17	Conevection version with humidifier	22

3. Maintenance

3.1	Cleaning	23
3.2	Cleaning of the glass	23
3.3	Automatic cleaning	24

4. What to do if...

4.1	Most common problems	26
4.2	Alarm message list	27
4.3	Safety thermostat of the cooking compartment	27

5. Data sheet

5.1	MPE523 MDE523	27
5.2	MPE5 -MPE5X - MDE5 - MDE5X	28
5.3	MPE7 -MPE7X - MDE7 - MDE7X	29
5.4	MPE10 - MPE10X - MDE10 - MDE10X	30
5.5	MPG5 - MDG5	30
5.6	MPG7 - MDG7	31
5.7	MPG10 - MDG10	32

6. Electrical drawings 33-39

Dear Customer,

We thank you for having purchased our product.

This oven is part of a line of appliances specifically designed for baking and patisserie, made of gas and electric ovens with different capacities. The pleasant and modern design of these ovens encloses ease of use, ergonomics and cooking control.

The oven has a 12 months warranty against any manufacturing faults, starting from the date on the sales invoice. The warranty covers the normal functioning of the oven and does not include the consumption materials (lights, gaskets, etc.) and faults caused by incorrect installation, wear, maintenance, repair, decalcification and cleaning, tampering and improper use.

The manufacturer reserves the right at any time to make improving or necessary amendments to the product.

1.1 General and safety warnings

- Carefully read this manual before installing and commissioning the oven, in that the text gives important indications regarding the safe installation, operating and maintenance of the equipment.
- Keep this manual in a safe and easily accessible place for further consultation by the operators.
- In case of transferring the oven, always attach the manual; if necessary, a new copy must be requested from the authorised dealer or directly from the manufacturing company.
- Once unpacked, ensure the oven is intact and does not show signs of damage due to transport. A damaged appliance must never be installed and commissioned; if in doubt, immediately contact the after-sales technical assistance or your own dealer.
- The appliance has been designed to cook food in closed premises and must only be used for this purpose: any other different use must, therefore, be avoided as considered improper and dangerous.
- The device is intended for professional use only by qualified personnel
- The oven must only be used by staff adequately trained for its use. To avoid the risk of accidents or damages to the appliance, it is also fundamental that staff regularly receive precise instructions regarding safety.
- The oven must not be used by persons with reduced physical, sensorial or mental capacities or by persons without experience and knowledge, unless supervised or educated regarding the operating of the appliance by a person responsible for their safety.

- Installation, extraordinary maintenance and repair operations on the equipment must only be carried out by professionally qualified staf.
- Children must be supervised to assure they do not play with the appliance or use it.
- Pay attention to the hot parts of the external surfaces of the equipment during functioning that, in working conditions, may exceed 60°C.
- In case of fault or bad functioning, the equipment must be deactivated; in case of repair, contact only an aftersales technical assistance centre authorised by the manufacturer and request original spare parts.
- Do not position other heat sources like, for example, fryers or hotplates, near the oven.
- Do not deposit or use flammable substances near the equipment.
- In case of prolonged disuse of the appliance, both the water and electric energy supply must be shut-off.
- Before commissioning the equipment, ensure to have removed all packaging, being careful to dispose of it in compliance with the Standard in force.
- Amendments to the oven wiring are not admitted.
- The non-compliance with the above warnings can jeopardise the safety of the equipment and yours.

The gas ovens comply with the essential requirements of 90/396/EEC Gas Directive and therefore have the EC conformity certificate issued by an approved body. They satisfy the requirements of the following gas regulations:

- EN 203 + subsequent amendments;
- EN 437 + subsequent amendments.

Installation must be carried out in compliance with safety requirements contained in the following regulations: • UNI CIG n° 7222-7723-8723 + subsequent amendments.

The appliance complies with the essential requirements of the Low Voltage Directives 2006/95/CEE. It satisfies the requirements of the following electrical regulations:

- EN 60335-1 + subsequent amendments;
- EN 60335-2-42 + subsequent amendments;
- EN 60335-2-46 + subsequent amendments;
- EN 60335-2-36 + subsequent amendments;
- EN 55104 / EN 55014 + subsequent amendments;
- EN 61000 + subsequent amendments.

The appliance complies with the essential requirements of the Electromagnetic Compatibility Directive 2004/108/ CEE.

3

				CAT II _{2H3+}	P mbar	630 28-30		G20 20	G25 /	COUNTRY IT-ES-IE-PT GB-GR-CH	N.B. The oven is factory set for the type of gas specified in the order.
CE TY	'PE	A 1		II 2H3B/P	P mbar P mbar	30 28-30	30 37) 25	LT-DK-FI-EE-NO LV-02-SK-SI-SE	
MOD					P mbar P mbar	50 50	50 50	20 20	/ 20	AT-CH De	During testing, the gas produced throu-
NR Σ	On			II _{2L3B/P} II _{2E3+}	P mbar P mbar	30 28-30	30 37] 20	25 1	NL LU	gh combustion (CO2 and CO) should be analysed and the nominal heat rating should be measured to ensure that the
G3	<u> </u>	20	G25	1 _{3B/P}	P mbar		30	1	1	MT-IS-HU-CY	 burners have been correctly calibrated for the type of installation required.
kg/l	n m	³ /h	m³/h	₃₊ _{2E}	P mbar P mbar	28-30 /	37 /) 20	1	CY PL	Data collected should be written down and in-
PRES	ET FOR	GAS -	EINGEST	AU AU GAZ Ellt Auf Ga Disposto à				A		mba	appliance.
					kW II	р	EN	203	-1	MADE IN ITAL	Y


1.2 Gas connection (only gas oven)

Installation instructions

The oven should be installed and commissioned by gualified technicians in compliance with current regulations and legislation. Gas appliances, electrical connections and rooms where the appliance is to be sited must comply with current regulations and legislation. The air reguirement of the burners is 2 m3/h per kW of power installed. Premises open to the public must comply with accident prevention laws and fire safety regulations. A flexible metal hose can be used to connect the appliance to the gas supply; make sure you fit an approved tap in a point that is easy to reach. Make sure that the flexible hose is not twisted or over-stretched or in contact with parts of the oven subject to overheating. Use locking clamps complying with installation regulations.

Checks to be carried out prior to installation.

Check the label on the left-hand panel of the oven to make sure that the appliance has been set for the type of gas on your premises. Check the label to make sure that the capacity of the gas pressure reducer is adequate for the supply of the appliance. Do not insert section reducers between the reducer and the appliance. We recommend fitting a gas filter between the tap and pressure regulator to ensure perfect performance.

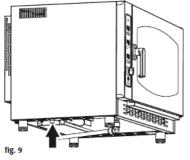

Connect the oven to the gas supply using a special R 1/2'' hose with an internal section of at least 16 mm. Connection to gas supply must be carried out using rigid or flexible metal pipes.

Use taps or gates with an internal diameter that is greater than that of the hose. After connecting the appliance to the gas supply make sure that there are no leaks from joints or connections.

You can test for leaks by using soapy water or foaming agent for leak detection.

Gas ovens should be inspected in compliance with specific regulations once a year by an authorised technician who will analyse combusted gases and check nominal heat rating.


Tino di gos	Pressione gas [mbar]			
Tipo di gas	Nom. Min.		Max	
Metano G20	20	17	25	
G.P.L. G30/G31	28-30/37	20/25	35/45	

The appliance can work correctly only when gas pressure keeps within specific values for each gas type .

If the pressure falls outside these values, it will not be possible to achieve optimum functioning of the appliance and for it to be installed permanently. Should this happen, call a technician to check your gas mains (ducts, gates and eventually pressure reducers) then, if necessary, contact your gas provider.

1.3 Gas pressure check (only gas ovens)

Check that the installed nozzles are correct for the type and pressure of supplied gas. If you need to change the nozzles, read the following paragraph.

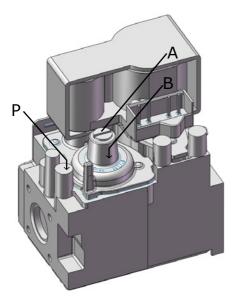

When the appliance is connected, turn it on and check the gas pressure.

Check gas pressure directly on the valve, as described below:


- Unscrew screw "P" on the pressure outletof the valve.
- Apply the pressure gauge to the pressure outlet.
- Regulate gas pressure to the values of table 2 by adjusting the pressure reducer outside the oven
- When the pressure is at the correct level, switch off the oven, remove the pressure gauge and replace screw "P".

In case of necessity, if the adjustment of the pressure is not sufficient, act as follows:

- Remove the protective cap **A**.
- Screw to increase the pressure of the outlet gas acting on the screw B and unscrew to decrease.
- At the end of the calibration reapply the protective cap **A**.

1.4 Replacing nozzles (gas type change) (for gas ovens only)

Category of appliance: II2H3+ Country: IT- ES -PT- CH-GB -GR - IE							
Oven	Nominal Power	Nozzle for G30 gas [30 mbar]	Nozzle for G31 gas [37 mbar]	Nozzle for G20 gas [20 mbar]			
5 GN 1/1	9,5 kW	115	110	161R			
7 GN 1/1	16 kW	145	135	195R			
10 GN 1/1	19 kW	155	145	225R			

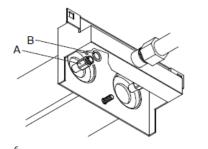

Use only original nozzles which must not be tampered with them in any way!

For connection to a type of gas that is different from the one specified on the rating plate, the burner/s nozzle/s must be replaced as follows:

- Unscrew nozzle to be replaced and replace it with the one that corresponds to the type of gas to be used.
 Refit washer.
- Nozzles are marked in hundredths of a millimetre.
- After replacing the nozzle/s, check gas pressure.

1.5 Electric connection

The electric system, as prescribed and specified by the Standard in force, must be equipped with an efficient ground. It is possible to guarantee the electric safety of the appliance only in the presence of Standard electric system.

For direct connection to the mains it is necessary to interpose a device between the equipment and the same mains, dimensioned depending on the load, that ensures its disconnection and which contacts have an opening distance enabling the full disconnection in the conditions of over-voltage category III, in compliance with the installation regulations; this device also must be located in a place and in a manner to be easily accessible at any moment by the operator.

Bring the main switch, to which the power supply cable plug will be collected, in position 0 (zero).

Have professionally qualified staff check that the plug cables section is adequate to the power absorbed by the appliance.

Loosen the screws fixing the left side of the oven and extract it.

ELECTRIC OVENS	GAS OVENS
L1 L2 L3 N 🛓	LN 🛓
<u>tab 1</u>	Between phases and <u>there must be</u> a potential difference of 230 V

Connect the cable to the terminal board following the indications on "**tab 1**". Lock the cable with the cable gland.

The power supply voltage with machine funcioning, must not be different from the

nominal voltage value of $\pm 10\%$.

The equipment must be included in an equipotential system which efficiency must be checked according to that reported in the Standard in force.

For the connection there is a clamp, located on the frame and marked with the symbol to which a cable with minimum section of 10 mm² must be connected.



For gas ovens, complete gas connection to the appliance before assembling the oven side again;


for electric ovens assemble the oven side.

7

1.6 Fume discharge (for gas ovens only)


Ovens should only be installed in adequately ventilated rooms in compliance with installation regulations.

The oven discharge can be connected by means of a forced evacuation system (e.g. hood fitted with an extractor fan). In this case the gas supply to the appliance must be controlled by the extraction system and will be interrupted if the extraction capacity drops below the prescribed values. When installing the appliance beneath a hood take care to ensure that:

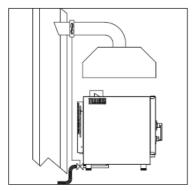

- a) the extracted volume is greater than the volume of combusted gas produced (refer to current regulations);
- b) the hood filter is made from a heat-resistant material (combusted gases may reach 300°C;
- c) the final section of the gas discharge tube must be inserted inside the hood:
- d) following interruption of gas supply the gas will be switched on manually.


1.7 Connection to the drain

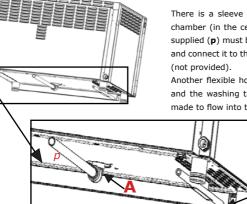


The oven must be connected to an open drain (funnel).

There is a sleeve (A) present in the lower part of the cooking chamber (in the centre)to which the bendand and the rigid pipe supplied (p) must be connected. Couple the bend in the rigid pipe and connect it to the oven. Now, take the rigid pipe into the funnel

Another flexible hose is present, which connects the front basin and the washing tank (where present). This hose must also be made to flow into the funnel.



1.8 Collegamento del tubo detergente



In the ovens with automatic washing, connect the small white/transparent plastic pipe (**T**) to the can of detergent, placing it as near to the bottom as possible. In order to preserve the integrity of the cooking chamber and the oven components, it is advised only to use the recommended detergent (see paragraph 3.3 page 24).

1.9 Switching on oven and testing

Before switching on the oven, carefully check that all systems and installation of the appliance are in compliance with current laws and with the technical and safety guidelines in this manual.

Check the following:

- The oven must be installed in a room where the temperature is over +4° C.
- The oven chamber must be empty.
- All packaging has been completely removed, including the protective film applied to the walls of the oven.
- Vents and ventilation openings must be open and unobstructed.
- Any parts that have been removed for installation purposes must be replaced.
- The main switch must be switched on and the water and gas taps must be open.

Testing

The oven should be tested by carrying out a trial cooking session to check that the appliance is working properly and that there are no problems or malfunctioning.

Switch on the oven pressing for 1 second the main switch T1.

Carry out a trial cooking session setting the temperature to 150° C, the timer to 10 min. and humidity to 5. Check every item in the list below:

- The light in the oven chamber switches on.
- The oven switches off if the door is opened and starts up again after the door has been closed.
- The temperature controller regulating the oven temperature is activated, causing the heating elements to switch off temporarily.
- Every 2 minutes the fan motor automatically reverses direction of rotation followed by a 20-second rest.
- During the 20-second motor rest the S1 "°C" lighting indicator will temporarily switch fixed-on showing that the oven chamber heating elements have been temporarily switched off.
- For 7-tray and 10-tray ovens: the two fans in the oven chamber rotate in the same direction.
- Check that water is being discharged to the fan/s from the humidity inlet duct in the oven chamber.
- At the end of the cooking session the oven alarm sounds for about 15 seconds.

\Lambda IMPORTANT

In case of blockage of the procedures during the setting of the cooking phases, or to solve any other blockages of the control panel, press, even more than once, the **T15** key.

2.1 Preliminary information



The appliance has been designed to cook food in closed premises and must only be used for this purpose: any other different use must, therefore, be avoided as considered improper and dangerous.

Survey the equipment during functioning.


Before cooking, we recommend pre-heating the oven at a temperature of about $+30^{\circ}/+40^{\circ}$ C higher than that required.

Once it has been connected to the mains, the oven is in "stand-by" condition (waiting).

The oven control panel is equipped with a knob **M** to perform the insertion and modification of the functioning parameters of the appliance. Such knob can also be pressed to select a function or confirm a certain parameter. The knob acts on a digital encoder and, therefore, is in continuous rotation (no end run). The parameters adjusted by the encoder vary clockwise increasingly.

In the stand-by condition, by pressing the **T1** key one switches to the "on" condition after board reset (a few seconds). The oven is ready to receive the cooking settings.

2.2 Control panel

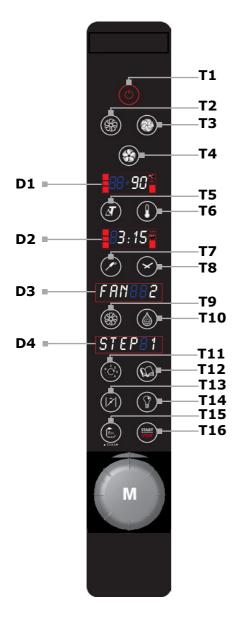

T1	Swich on / Swich off				
	· · · · · · · · · · · · · · · · · · ·				
T2	Cooking mode: CONVECTION				
Т3	Cooking mode: STEAM				
Т4	Cooking mode: MIX steam/convection				
T5	ΔT (Delta-T) cooking				
Т6	Temperature				
T7	Probe temperature				
Т8	Time				
Т9	Fan speed				
T10	Humidity				
T11	Phases / Pre-heating				
T12	Programms				
T13	Humidity draining valve				
T14	Lights swich on/off				
T15	Cancel / Back / Cleaning (opt.)				
T16	Start / Stop				
D1	Cooking chamber temperature display ΔT set diplay				
D2	Time display / Probe temperature display				
D3	Fan speed display				
D4	Cooking phases display Programs display				
м	Knob with encoder				


2.3 Convection cooking

Once the oven has been switched on by pressing the **T1** key, select the convection cooking modality by pressing the **T2** key. Activate the desired cooking temperature set by pressing the **T6** key, signalled by the flashing of the key itself: set the temperature value by acting on the **M** knob (up to 280°C) and confirm the selection by pressing the **T6** key or the **M** knob of the encoder. The display automatically passes to the selection of the cooking time (the **T8** key flashes).


Set the cooking time by acting on the ${\bf M}$ knob and confirm the selection by pressing the ${\bf T8}$ key or the ${\bf M}$ knob of the encoder.

The display automatically passes to the selection of the fan speed (the **T9** key flashes). Set the fan rotation speed (there are 3 available speeds) and confirm the selection by pressing the **T9** key or the **M** knob of the encoder.

Press the T16 Start key to start cooking.

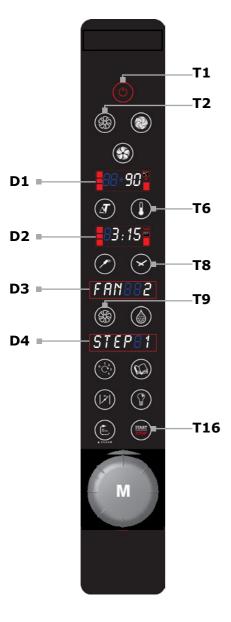

2.4 Steaming

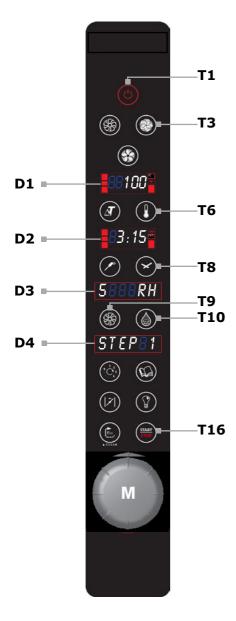


Once the oven has been switched on by pressing the **T1** key, select the steaming mode by pressing the **T3** key. Activate the desired cooking temperature setting by pressing the **T6** key, signalled by the flashing of the key itself: set the temperature value by acting on the **M** knob (up to 120°C) and confirm the selection by pressing the **T6** key or the **M** knob ofthe encoder.

The display automatically passes to the selection of the cooking time ($\mathbf{T8}$ key flashes). Set the cooking time by acting on the **M** knob and confirm the selection by pressing the $\mathbf{T8}$ key or the **M** knob of the encoder.

The display automatically passes to the selection of the fan speed (**T9** key flashes). Set the fan rotation speed (there are 3 available speeds) and confirm the selection by pressing the **T9** key or the **M** knob of the encoder.

Press the **T16** Start key to start cooking.

2.5 Convection/steam mixed cooking

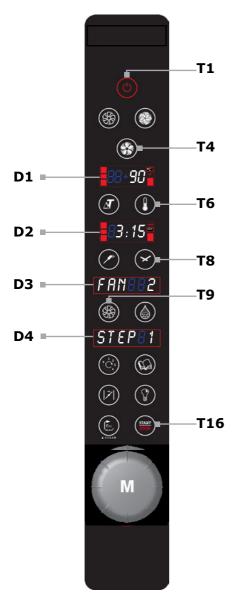

Once the oven has been switched on by pressing the **T1** key, select the convection/steam mixed cooking modality by pressing the **T4** key.

Activate the desired cooking temperature setting by pressing the **T6** key, signalled by the flashing of the key itself: set the temperature value by acting on the **M** knob (up to 270 °C) and confirm the selection by pressing the **T6** key or the **M** knob of the encoder.


The display automatically passes to the selection of the cooking time ($\mathbf{T8}$ key flashes). Set the cooking time by acting on the **M** knob and confirm the selection by pressing the $\mathbf{T8}$ key or the **M** knob of the encoder.

The display automatically passes to the selection of the fan speed (**T9** key flashes). Set the fan rotation speed (there are 3 available speeds) and confirm the selection by pressing the **T9** key or the **M** knob of the encoder.

The display automatically passes to the humidity selection in the cooking chamber (**T10** key flashes). Set the humidity value by acting on the **M** knob (0 to 10, where: 1 = 10% h.r.; 2 = 20% h.r.; ... 5 = 50% u.r.;) and confirm the selection by pressing the **T10** key or the **M** knob of the encoder.

Press the T16 Start key to start cooking.

2.6 Core probe cooking

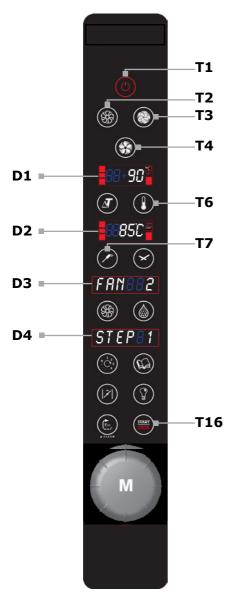

Once the oven has been switched on by pressing the **T1** key, select the desired cooking mode by pressing the relative key (**T2 - T3 - T4**).

Activate the desired cooking temperature setting by pressing the **T6** key, signalled by the flashing of the key itself: set the temperature value by acting on the **M** knob (up to 280 °C) and confirm the selection by pressing the **T6** key or the **M** knob of the encoder.

The display automatically passes to the selection of the cooking time (**T8** key flashes). Do not set the cooking time but choose the core probe cooking by pressing the **T7** key. Select the desired temperature value at the core of the product by acting on the **M** knob. Confirm the selection by pressing the **T7** key or the **M** knob of the encoder. (IMPORTANT: the cooking chamber temperature must be at least 5°C higher than the core probe temperature).

Continue with the set of the other cooking parameters as desired.


Press the **T16** Start key to start cooking.

Note:

How to use the probe:

the core probe tip must be positioned at the center of the thicker part of the product that has to be cooked.

2.7 Cooking with ΔT

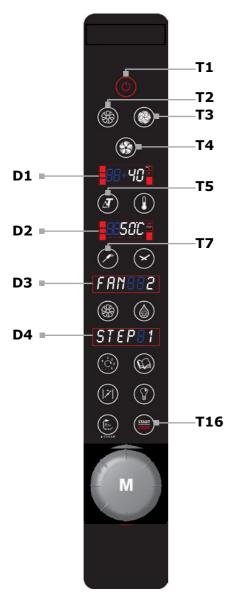

Once the oven has been switched on by pressing the **T1** key, select the desired cooking mode by pressing the relative key (**T2 - T3 - T4**).

Select the ΔT mode by pressing the T5 key. Set the the desired temperature difference between the core of the product and the cooking chamber by acting on the knob M. Confirm the selection by pressing the T5 key or the M knob of the encoder.

The display automatically passes to the selection of the core temperature (**T7** key flashes).Set the temperature value at the core of the product by acting on the **M** knob and confirm the selection by pressing the **T7** key or the **M** knob of the encoder.

Continue with the set of the other cooking parameters as desired.

Press the T16 Start key to start cooking.

Note: <u>Use of the **4**</u> cooking:

ΔT (*Delta-T*) mode is particulary indicated for the cooking of medium and big roast. This kind of cooking is done keeping a costant difference of temperature between the cooking chamber and the core of the product.

Since the temperature in the cooking chamber is lower then usual and the time to complete the cooking is longer the roasts result more tender and juicy then ones cooked in traditional way. In the same time the meat shrinkage is reduced.

ΔT temperatures suggested:

- 40°C for red meat roasts (beef..), with a core temperature set between 45°C and 55°C;
- 50°C for white meat roasts (veal..), with a core temperature set between 75°C e 85°C.

2.8 Butterfly valve



The humidity draining has the task of expelling humidity formed inside the cooking chamber during the cooking.

Upon oven switch-on the valve is always closed. At the end of the cooking cycle the valve remains in the position it was in at that moment.

The opening or closing of the humidity discharge valve is controlled by pressing the **T13** key. While the valve is operating, it is not possible to give a new command.

The opening of the valve is signalled by the status change of the **T13** key.

- on: valve is open
- off: vale is close

Even with the valve closed, there is no risk of overpressures inside cooking compartment as they are controlled by the drain.


During the CONVECTION/STEAM MIXED cooking the valve is automatically managed. Anyway it is possible to change the status manually.

During STEAMING the valve will be kept in close position.

2.9 Cooking chamber cool down

To cool down the cooking chamber, press the button **T15** *ESC* and then the button **T16** *Start*. It is possible to open the door during the cool down. To stop cool down press the button **T15** *ESC*.

2.10 Pre-heating

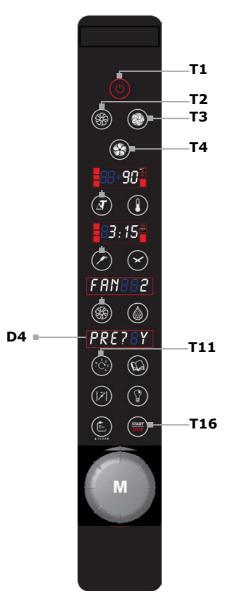

Once the oven has been switched on by pressing the T1 key, select the desired cooking mode by pressing the relative key (**T2 - T3 - T4**).

To activate the pre-heating press the **T11** key and turn the ${\bf M}$ knob to left. The display ${\bf D4}$ visualize:

PRE? N Press the M knob to activate preheating . The display D4 will now visualize: PRE? Y


Turn the ${\bf M}$ knob to right to continuing with the set of the other cooking parameters as desired.

Note:

To achive a better result the cooking chamber pre-heating is always suggested (exept for those preparations that need to start cooking in the cold oven).

The products to be cooked must be inserted in the oven once the pre-heating is complited.

2.11 Programming cooking processes

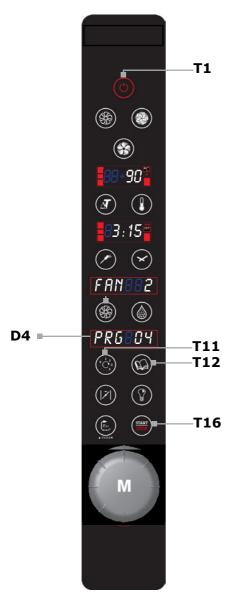

Every single previously illustrated cooking phase, can be memorised in order to compose a cooking process.

Once the phase setting is complete, press the **T11** Phase key and turn the M knob to right to add a new phase. The **D4** display now will visualize: **STEP 2** It is now possible to continue with the set of the other cooking parameters as desired.

Proceed as above to add new phases (up to 9).

Turn the **M** knob to left until **D4** display shows and press the **T16** Start key to start cooking.

2.12 Cooking program storage


It is possible to save a cooking process on the oven internal memory.

Once the desired program is created press **T12** key for some seconds. The **D4** display will show the first available program number position (ex. if there are already 3 programs stored on the positions 1,2 and 3, it will be shown program 4 as the first available position to save the program).

Chose the position number disired by turning to right or to left the **M** knob and then press again the **T12** key for some seconds to memorize the program. The D4 display will show:

The oven allows to store up to 99 programs.

2.13 Loading a stored cooking program

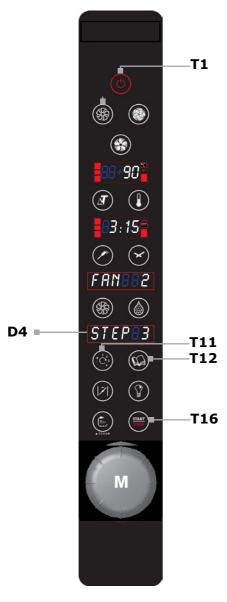

To access a memorised program, press the **T12** Book key and select the program number, shown on the **D4** display, by turning the **M** knob to right or to left.Confirm the selection by pressing the **M** knob when the disired program nuber is shown on the **D4** display.



The **T11** key will blink and it will be possible, by rotating the M knob, see the phases of the program.

Select phase 1 (STEP81) and press T16 Start key to start the program.

It is also possible to start the cooking from a differante phase then 1 by choosing the phase number (e.g. *STEP83*) and press T16 Start key to start the program from the selected phase. In this case the pre-heating will not work.

2.14 Modification and cancelling of the cooking programs

To modify a stored program choose the program as explained at the previous chapter (2.12). Choose the phase number to modify by rotating the **M** knob. When modification is completed, if desired, it is possible to save the modified program by pressing the **T12** key for some seconds (as explained at chapter 2.10).



leted). You cannot delete just one phase between others (eg. you cannot delete only phase 3 and avoid deleting phase 4, 5 ...).

If you wish to cancel the entire program move to phase 1, press and hold button **T11**. The display **D4** will show: **DELTON** By turning the knob **M** to the right, the display shows: **DELTON** At this point you can confirm by pressing the knob **M**.

If you want to abort program erasing, when you see the message, **DELTENN** confirm with **M** knob or press **T15** button *ESC*.

2.15 Compartment lighting.

Press **T14** key to turn on the cooking chamber lights. Lights will be swiched on for 45 seconds before automatically turn off.

It is possible to turn off manually the cooking chamber lights by pressing **T14** key.

2.16 Off and oven swich off.

To stop a cooking press **T16** key.

To turn off the oven press T1 key.

2.17 Convection version with humidifier

	Ċ	T1
		T2
D1	 88+90 ° I	—_T5 —_T6
D2	 83:15	— T7 — T8
D3	- Fan 882 ® ()	— T9 — T10
D4 =		T11 T12 T13 T14 T15 T16

Models:

MPE423 - MPE523 MPE4 - MPE5 - MPE7 - MPE10 MPG5 - MPG7 - MPG10

T1	Swich on / Swich off	
Т2	Cooking mode: CONVECTION	
Т5	ΔT (Delta-T) cooking	
Т6	Temperature	
Т7	Probe temperature	
Т8	Time	
Т9	Fan speed	
T10	Humidity	
T11	Phases / Pre-heating	
T12	Programms	
T13	Humidity draining valve	
T14	Lights swich on/off	
T15	Cancel / Back / Cleaning (opt.)	
T16	Start / Stop	
D1	Cooking chamber temperature display	
D2	Time display / Probe temperature display	
D3	Fan speed display	
D4	Cooking phases display Programs display	
м	Knob with encoder	

22

3. Maintenance

3.1 Cleaning

At the end of a working day, clean the equipment, both for hygienic reasons and to avoid malfunctionings.

The oven must never be cleaned using direct or high pressure water jets. In the same manner, to clean the appliance do not use pan-scrubbers, steel brushes or scrapers; it is eventually possible to use stainless steel wool, rubbing it in the direction of the sheets satin finish.

Wait for the cooking compartment to cool down.

Remove the side tray racks.

Remove the manually removable residues and place the removable parts inside dishwashers.

To clean the cooking compartment use soapy warm water. Subsequently, all interested surfaces must be thoroughly rinsed, being careful to ensure no detergent residues remain.

To clean the oven external parts, use a damp cloth and a non-aggressive detergent.

ATTENTION

Never use, for any reason, chlorine-detergents and / or chlorine-containing products in general. The use of these products will void the oven warranty.

3.2 Cleaning of the glass



The door glass can be cleaned externally and internally. For this purpose, turn the stop holding the internal glass in position clockwise and, once the glass is opened, clean it with suitable detergent.

Never use abrasive materials.

The glass must be correctly closed and locked in position by turning the stop anti-clockwise.

3.3 Automatic cleaning system



To enable the AUTOMATIC CLEANING function (optional kit) do as follow:

- Press T1 button to turn on the oven
- Remove the filter on the discharge inside the cooking chamber.
- Make sure the cleaner is connected to the oven by the appropriate pipe.
- Simultaneously pressing the key **T15** (Clean) and the knob **M**.
- The display D3 will display the type of washing. Turning the knob M, you can choose between washing SOFT (light), NORM (medium) or Hard (intense) according to the type and amount of soil inside the cavity.
- Once chosen the appropriate washing press T16 (Start) to start the automatic wash. The cleaning works only with the door closed.
- Before starting a new cooking rinse manually the cooking chamber with the hand-shower to remove any residual detergent.
- Replace the filter of the cavity discharge in place again.

During washing, the display **D3** will show the following phases:



T15 T16 Rinse Drying

Cleaning complete


Important:

We recommend the use of the approved clea-



ner to clean the oven (ECOLAB **OVEN CLEANER POWER).**

The use of a cleaner not approved may cause damage to the washing system and the integrity of the cavity and will void the manufacturer's warranty.

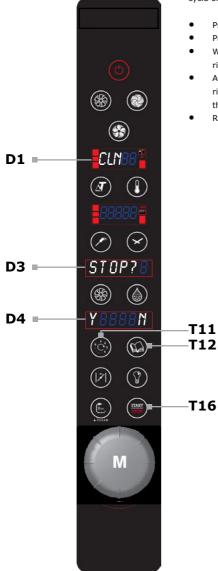

To end the AUTOMATIC WASHING before it has completed the full cycle of cleaning, follow these steps:

- Press the Stop button T16;
- Press the button T11 to confirm or T12 to resume washing.
- When the washing is interrupted automatically switches to the rinsing phases.
- At the end of the automatic rinsing phases perform additional rinses with hand-shower to remove any detergent residue from the cooking chamber.
- Replace the filter of the cavity discharge in place again.

4. What to do if...

4.1 Most common problems

In case of a serious anomaly it is very important to switch-off the equipment, by acting on the multiple pole switch, and close the gas and water shut-off cocks upstream of the appliance.

Problem				
	Check that the multiple pole switch is closed and there is mains voltage.			
	Check that the gas shut-off cock upstream of the appliance is open.			
The oven does not start	Check integrity of the oven protection fuses.			
The oven does not start	Ensure the oven door is correctly closed.			
	Check to have correctly set the cooking cycle parameters.			
	Ascertain the oven is not in error.			
If after these operations the oven does not start, contact the after-sales assistance.				
The fan stops during	Switch-off the oven and wait for the motor thermal protection to automatically reset.			
functioning	Ensure that the cooling inlets are not obstructed.			
Sho	uld the problem repeat, contact the after-sales assistance.			
	Use lamps resistant to heat.			
Internal lighting does not work	 Replace the lamps as follows: Ascertain that the omnipolar switch upstream of the oven is open and the appliance is cold. Open the internal glass of the oven door. Remove the protection glasses of the lamps. Replace the lighting lamps. 			
Sho	uld the problem repeat, contact the after-sales assistance.			
Water does not flow into the humidifier tubes	Check that the water shut-off cock is open.			
Sho	uld the problem repeat, contact the after-sales assistance.			
	Check that the gas shut-off cock upstream of the appliance is ope $\underline{\downarrow}$			
The oven is in "GAS" error	Press the M knob for 1 second			
	Have a technician check the electric connection sequence is correct and that a potential difference of 230 V is present between phase and $\ .$			
Should the oven continue not to work, due to the burners not igniting, contact the after-sales assistance.				

N°	MESSAGE	DESCRIPTION
1	"OVEN NOT CONFIGURED"	OVEN MODEL NOT SPECIFIED
2	"PROBE NOT CONNECTED"	PROBE IS NOT CONNECTED TO THE OVEN
3	"TCJ1 SH.CIRC"	SHORT CICUIT ON MAIN PROBE
4	"TCJ1 OPEN"	MAIN PROBE UNPLUGGED
5	"TCJ2 SH.CIRC"	SPILLONE IN CORTO
6	"SAFETY THERM"	SECURITY THERMOSTAT
7	"ALARM MOTORS"	ALLARME MOTORI
8	"HI TEMP"	HI TEMPERATURE ALARM IN THE COMPARTMENT (LEFT SIDE)
9	"NO COM"	MANCATA COMUNICAZIONE CON SCHEDA USB


4.2 Alarm message list


4.3 Safety thermostat of the cooking compartment

If the temperature inside the cooking compartment reaches 350°C, the safety thermostat interrupts supply to the oven's heating elements.


Such safety device can be restored only by an after-sales assistance service technician as further checks are required.

5.1 MPE523 - MPE523X - MPE523XK1 - MPE523XK2 MDE523 - MDE523X - MDE523XK1 - MDE523XK2

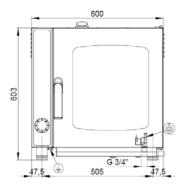

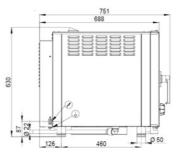

5. Data sheet

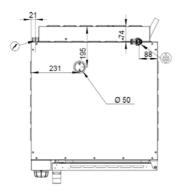

TECHNICAL DATA

MPE523 - MDE523


Dimensions: 600x608x603 mm Volume: 0,25 m³ Weigth: 52 Kg Chamber capacity: 5x(GN 2/3) Distance between layers: 74 mm Net dimension of oven cavity: 375x420x390 mm (LxHxP) Oven cavity power: 3 kW Total electric power: 3,3 kW Total electric power: 1N 230V AC-50Hz


TECHNICAL DATA

MPE523X - MPE523XK1 - MPE523XK2 MDE523X - MDE523XK1 - MDE523XK2

Dimensions: **600x608x603** mm Volume: **0,25** m³ Weigth: **52** Kg Chamber capacity: **5x(GN 2/3)** Distance between layers: **74** mm Net dimension of oven cavity: **375x420x390** mm (LxHxP) Oven cavity power: **4,5** kW (..X - ..XK1) - **6** kW (..XK2) Total electric power: **4,8** kW (..X - ..XK1) - **6,3** kW (..XK2) Total electric power: **3N 230V AC-50Hz** (..X) **3N 230V AC-60Hz** (..XK1 - ..XK2)

5.2 MPE5 - MPE5X - MDE5 - MDE5X

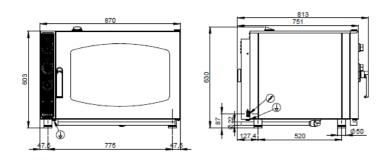


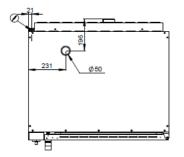



TECHNICAL DATA

Dimensions: **870x751x603** mm Volume: **0,39** m³ Weigth: **65** Kg Chamber capacity: **5x(GN 1/1) - 5x(60x40)** Distance between layers: **75** mm Net dimension of oven cavity: **645x420x450** mm (LxHxP) Oven cavity power: **6** kW or **7,4** kW (..X) Total electric power: **6,3** kW or **7,7** kW (..X) Power supplay voltage: **3N 400V AC-50Hz**

5.3 MPE7 - MPE7X - MDE7 - MDE7X

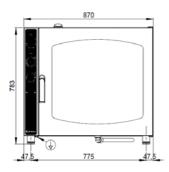

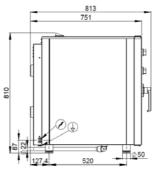


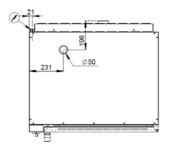



TECHNICAL DATA

Dimensions: **870x751x783** mm Volume: **0,50** m³ Weigth: **80** Kg Chamber capacity: **7x(GN 1/1) - 7x(60x40)** Distance between layers: **75** mm Net dimension of oven cavity: **645x600x450** mm (LxHxP) Oven cavity power: **9** kW or **12** kW (..X) Total electric power: **9,6** kW or **12,6** kW (..X) Power supply voltage: 3N 400V AC-50Hz

5.4 MPE10 - MPE10X - MDE10 - MDE10X

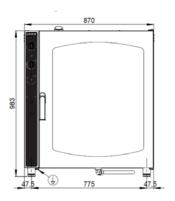

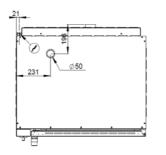


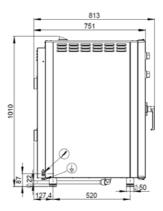



TECHNICAL DATA

Dimensions: **870x751x983** mm Volume: **0,64** m³ Weigth: **100** Kg Chamber capacity: **10x(GN 1/1) - 10x(60x40)** Distance between layers: **75** mm Net dimension of oven cavity: **645x800x450** mm (LxHxP) Oven cavity power: **12** kW or **16,7** kW (..X) Total electric power: **12,6** kW or **17,3** kW (..X) Power supply voltage: **3N 400V AC-50Hz**

5.5 MPG5 - MDG5

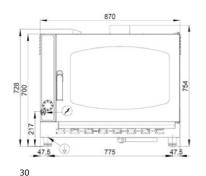

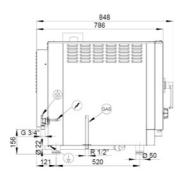


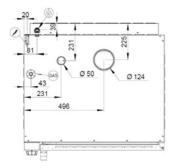


TECHNICAL DATA

Dimensions: **870x786x700** mm Volume: **0,48** m³ Weigth: **110** Kg Chamber capacity: **5x(GN 1/1) - 5x(60x40)** Distance between layers: **74** mm Net dimension of oven cavity: **645x420x450** mm (LxHxP) Oven cavity power: **9,5** kW **8168** Cal/h Total electric power: **0,4** kW Power supplay voltage: **1N 230V AC-50Hz**

5.6 MPG7 - MDG7

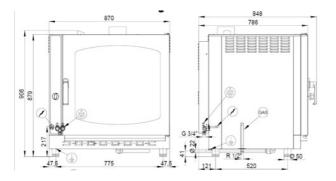


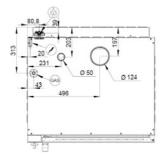



TECHNICAL DATA

Dimensions: **870x786x879** mm Volume: **0,60** m³ Weigth: **148** Kg Chamber capacity: **7x(GN 1/1) - 7x(60x40)** Distance between layers: **74** mm Net dimension of oven cavity: **645x600x450** mm (LxHxP) Oven cavity power: **16** kW **13575** Cal/h Total electric power: **0,8** kW Power supply voltage: 1N 230V AC-50Hz

5.7 MPG10 - MDG10

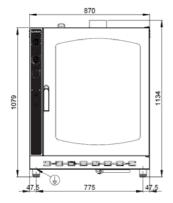

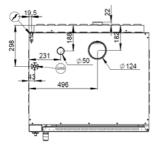

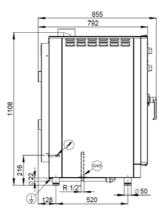

TECHNICAL DATA

Dimensions: **870x792x1079** mm Volume: **0,74** m³ Weigth: **160** Kg Chamber capacity: **10x(GN 1/1) - 10x(60x40)** Distance between layers: **75** mm Net dimension of oven cavity: **645x800x450** mm (LxHxP) Oven cavity power: **19** kW - **16337**Cal/h Total electric power: **0,8** kW Power supply voltage: 1N 230V AC-50Hz

6. Electrical drawings


C1, C2	Motor capacitor
EL	Washing electrovalve
EU	Humidifier solenoid valve
EVG	Elettrovalvola bruciatore camera
F1	Chamber thermostat
FM1, FM2	Motor thermal protection (inc.)
FR	Cooling fan
FRC, XFLC	Filter E.M.C.
FS1	Chamber safety thermostat
FU1	Fuse
H1, H2	Luminous indicator
IGN1	Burner control board
INV	Motor inverter
К0	Contactor
KR	Contactor for heating elements
L1, L2	Chamber lighting lamp
M1, M2	Motor
MV	Steam butterfly valve

Legenda	1
---------	---

Р	Main switch / timer
PD	Detergent pump
PL	Washing pump
R	Elements
S	Main switch/cooking mode selector
SC	Chamber probe
SC	Cooking selector probe/time
SCHB	Electronic buzzer board
SCHF	Oven control electronic card
SP	Microinterruttore porta
SS	Core probe (opt.)
SU	Humidity selector
SV	Fan speed selector
TH20	Timer "instant" (water injection)
TS	Probe thermoregulator
X./	Connector
Z1 / Z2	Washing Tank level control probes


6. Electrical drawings

MPE423

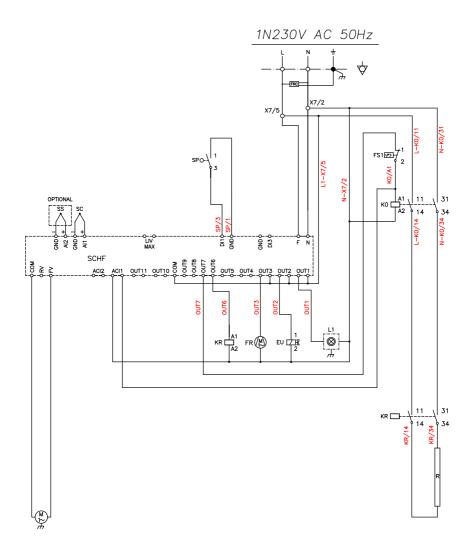


34

MPE523(W) - MDE523(W)

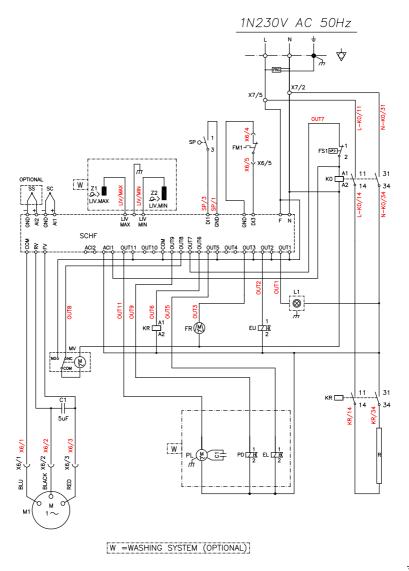


35


MPE4(W) - MPE5(W) - MDE5(W)

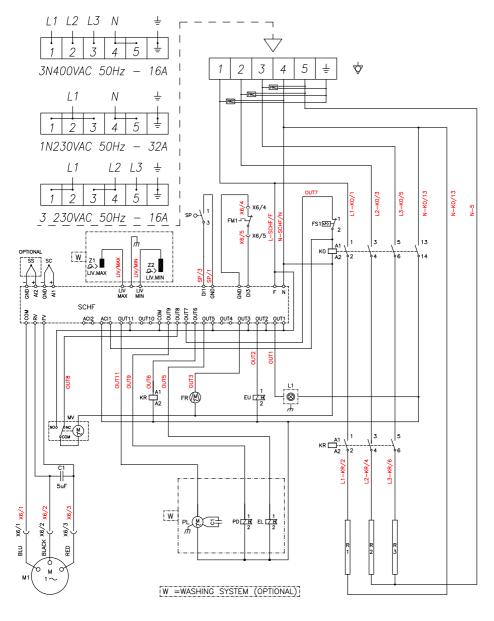

MPE7(W) - MPE10(W) - MDE7(W) - MDE10(W)

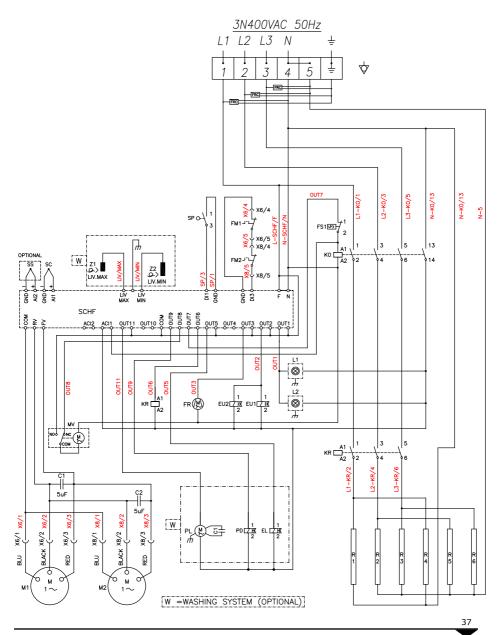

MPG5(W) - MDG5(W)

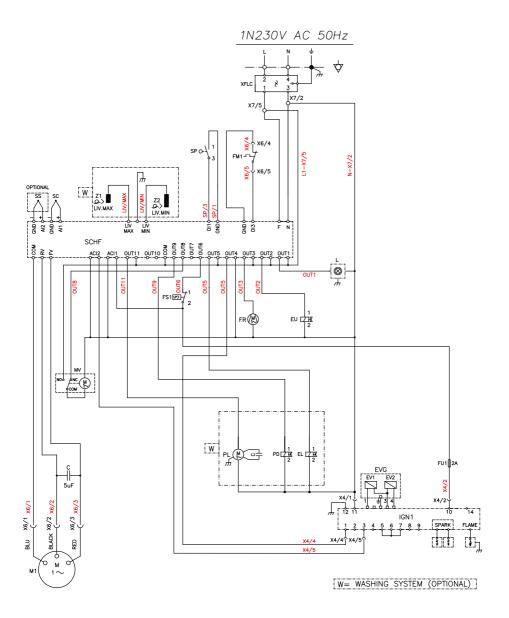

MPG7(W) - MPG10(W) - MDG7(W) - MDG10(W)

